

FL-ABB 200

No. 78.235


FL-ABK 200

No. 78.236

Flächenreiniger mit Absaugsystem Surface Cleaner with Air Recovery System

Montageanleitung

⚠ (Diese Anleitung gilt für das Basismodell sowie für daraus entstehende Versionen)

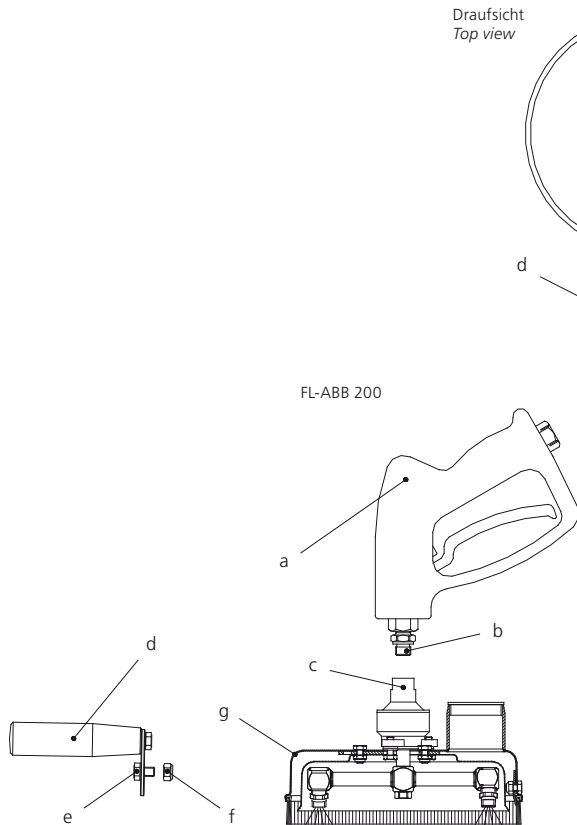

1. Die HD-Pistole (a) mittels der vormontierten Verschraubung (b) am Drehgelenk (c) anschliessen.
2. Den Handgriff (d) mittels Schraube (e) und Sicherungsmutter (f) an das Gehäuse (g) befestigen.



⚠ Hinweis: Die HD-Pistole (a) sollte ca. 90° zum Handgriff (d) montiert werden (siehe Draufsicht).

⚠ Für Ihre Sicherheit

- Alle Anleitungen sind vor erster Inbetriebnahme zu lesen. Das Gerät ist auf ordnungsgemässen Zustand und Betriebssicherheit zu prüfen.
- Alle Produkte die mit Hochdruck betrieben werden, dürfen nicht ungeschützt verwendet werden.
- Bei Düsenwechsel sowie vor Wartungs- und Instandsetzungsarbeiten die Wasserzufuhr absperren, das System abschalten und gegen unbeabsichtigtes Einschalten sichern.
- Nach dem Abschalten des Systems läuft der Kreiselarm für kurze Zeit nach. Beim Anfassen des Kreiselarmes besteht Verletzungsgefahr.
- Es gelten die Sicherheitsrichtlinien (Unfallverhütungsvorschriften) des Herstellers von Hochdruckgeräten.
- Die Düsenbefestigung erfolgt laut Angaben des Düsen-Herstellers.
- Das Gerät nicht über Gegenstände oder unebene Flächen führen.
- Das Gerät während der Benutzung nicht anheben.
- Bei einer Unwucht oder Krümmung des Kreiselarmes darf das Gerät nicht benutzt werden, da dadurch das Drehgelenk beschädigt wird.
- An den Geräten dürfen keine Veränderungen vorgenommen werden.
- Das Gerät darf nur von speziell ausgebildetem Fachpersonal installiert und bedient werden.

Assembly instructions

⚠ (This instruction is valid for the base model as well as for the resulting versions)

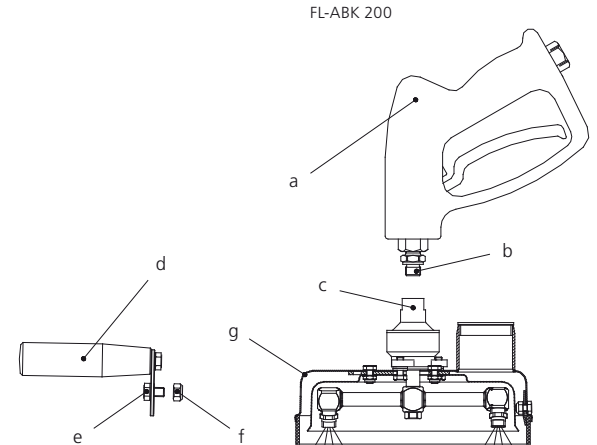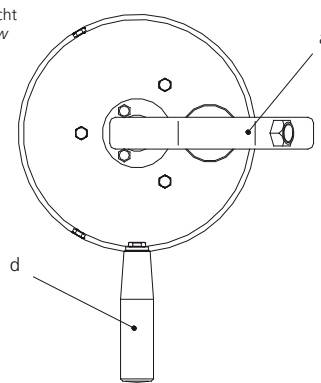

1. Install the HP-gun (a) with the preinstalled adaptor (b) to the swivel (c).
2. Use screw (e) and safety nut (f) to install the handle (d) to the housing (g).

⚠ Note: Install the HP-gun (a) in a 90° angle to the handle (d) (see top view).

⚠ For your own safety

- Read all instructions before the initial operation. Check their proper condition and that they operate safely.
- Always use protection gear when using products connected to high pressure.
- Before any maintenance or nozzle-change, turn off the high pressure water supply, e.g.: turn off and secure the power switch.
- After turning off the system, allow all self propelled equipment to come to a complete stop before handling.
- Safety regulations and guidelines (Accident Prevention Rules) from the manufacturer of your high pressure cleaner are applicable.
- Nozzle installation according to nozzle manufacturer.
- Do not move the unit over objects or uneven surfaces.
- Do not lift up the unit while operating.
- Do not run the unit if spray-arm is out of balance or bent, damage to the swivel will result.
- No modifications to the unit are permitted.
- The equipment may be installed and used only by particularly trained technical personnel.

FL-ABB 200

No. 78.235



FL-ABK 200

No. 78.236

Flächenreiniger mit Absaugsystem Surface Cleaner with Air Recovery System

Ersatzteilliste

Spare parts List

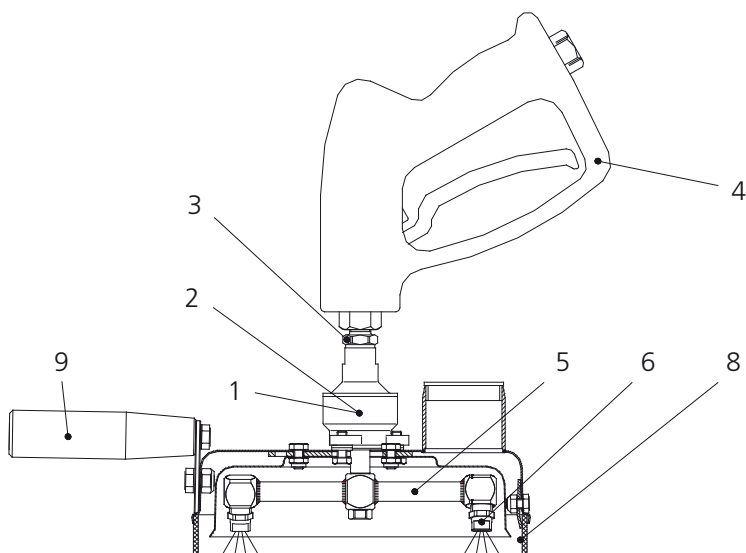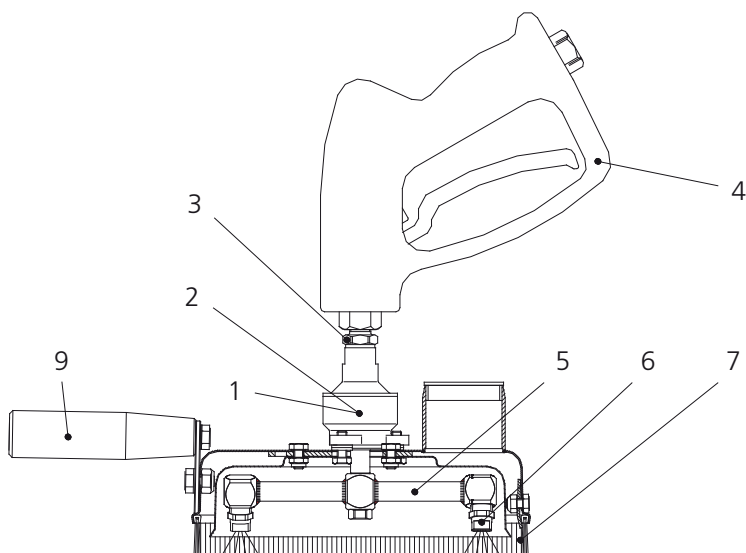

Pos.	Art. Nr.	Bezeichnung
1	55.020	Drehgelenk DYW
2	36.905	Hartmetall-Dichtsatz
3	51.003	Verschraubung G1/4"M - G1/4"kM
4	29.094	HD-Pistole 350 bar
5	82.321	Turbo-Kreisel-Arm ø150
6	18.15030	HD-Düse 1503
7	901.490	Bürstenring
8	902.387	Kunststoff-Band
9	78.945	Handgriff

Pos.	Part No.	Description
1	55.020	Swivel DYW
2	36.905	Carbide seal-kit
3	51.003	Adaptor G1/4"M - G1/4"kM
4	29.094	HP-gun 350 bar
5	82.321	Turbo-rotor-arm ø150
6	18.15030	HP-nozzle 1503
7	901.490	Brush ring
8	902.387	Plastic band
9	78.945	Handle